



# wallbox

plug & drive

CLIENT MANUAL

This manual will help you understanding all the steps needed in order to install the Onyx Pedestal and configure it depending on your electrical network.

## ONYX PEDESTAL

# ASSEMBLIES

Assembly Step by Step

Onyx Pedestal



## Assembly Step by Step

-  **Installation Procedure**  
pages 2-16
-  **Items Supplied with Product**  
page 17
-  **Further Steps**  
page 18








Needed:



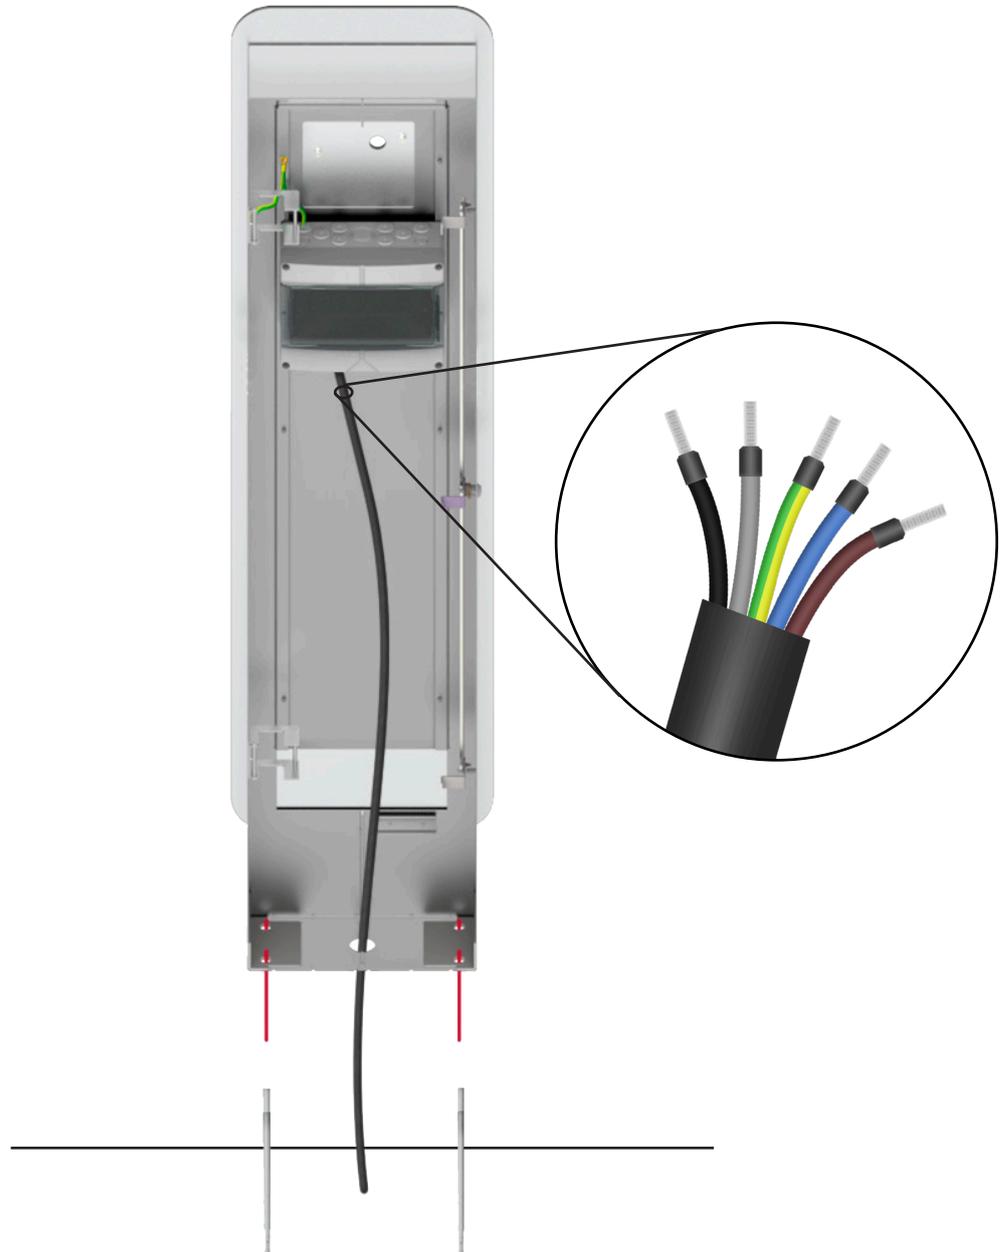





Torque with 75 Nm






Configure the electric box regarding the number of chargers and the type of your electrical network as seen on the next pages.




## Electric box configuration 1

### Single charger monophas

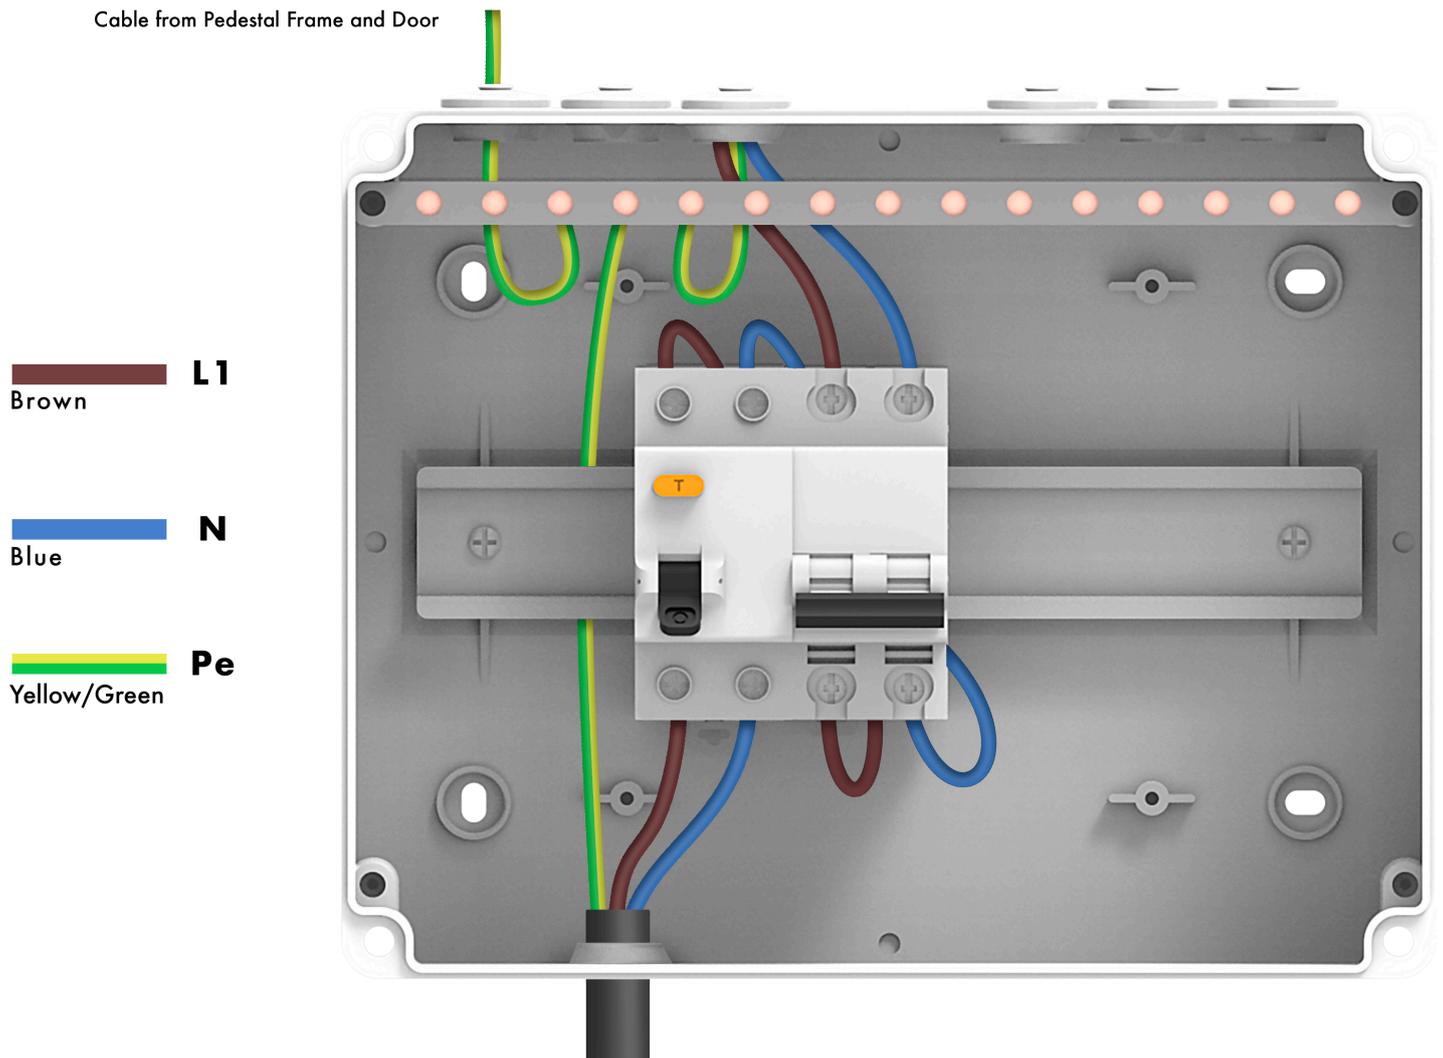


## Electric box configuration 2

### Dual charger monophas

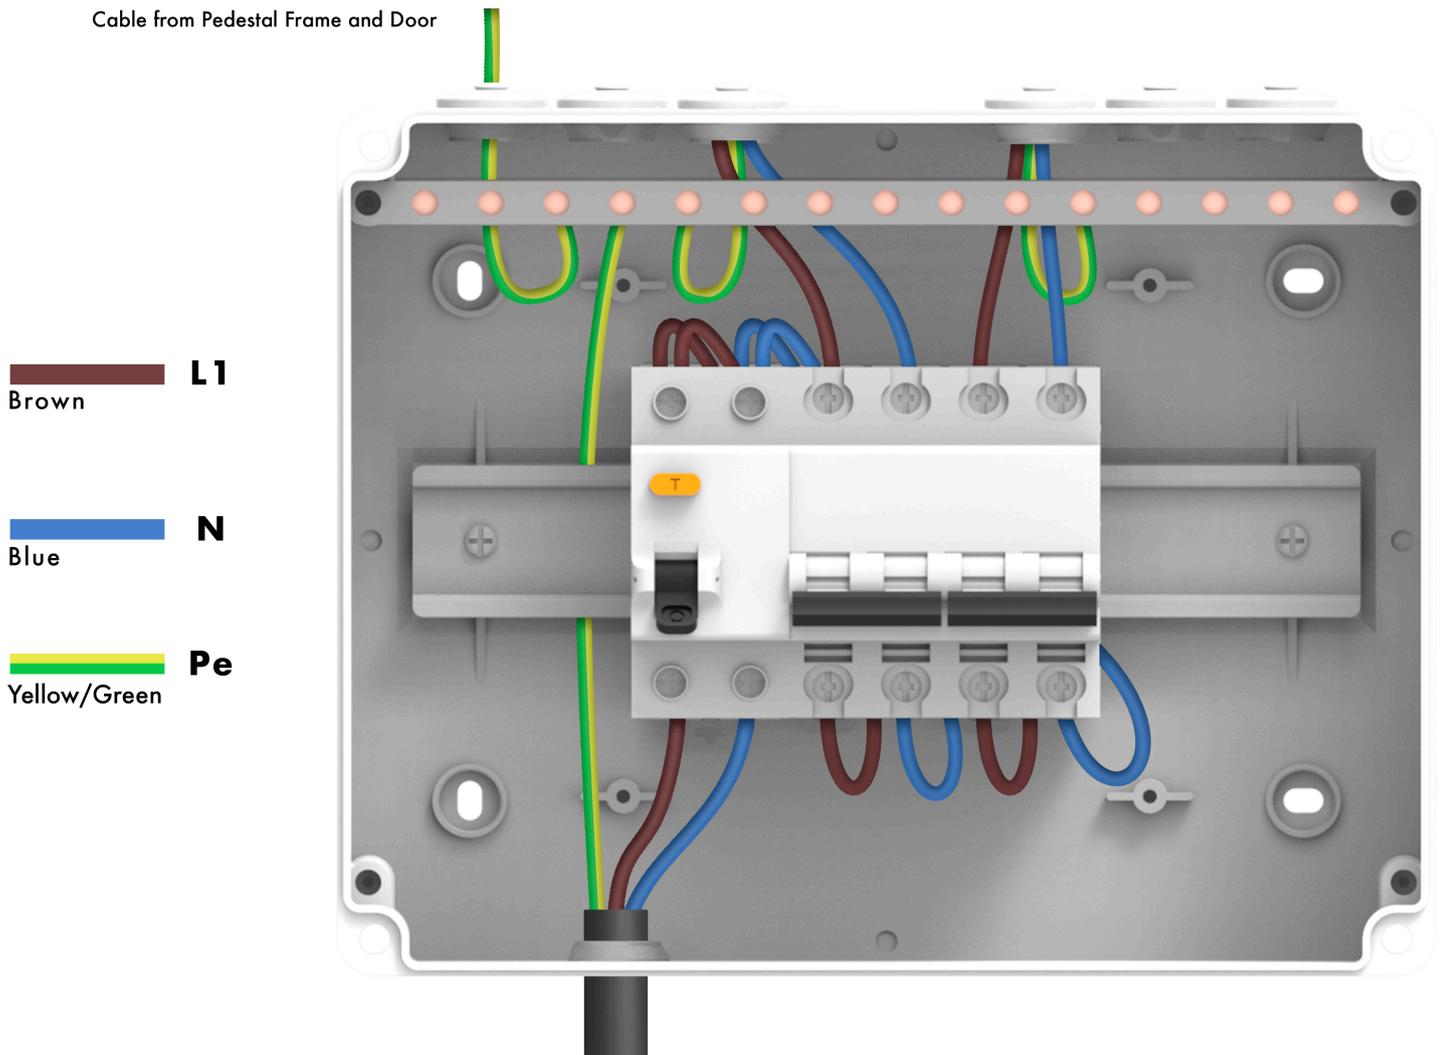


## Electric box configuration 3

### Single charger triphase

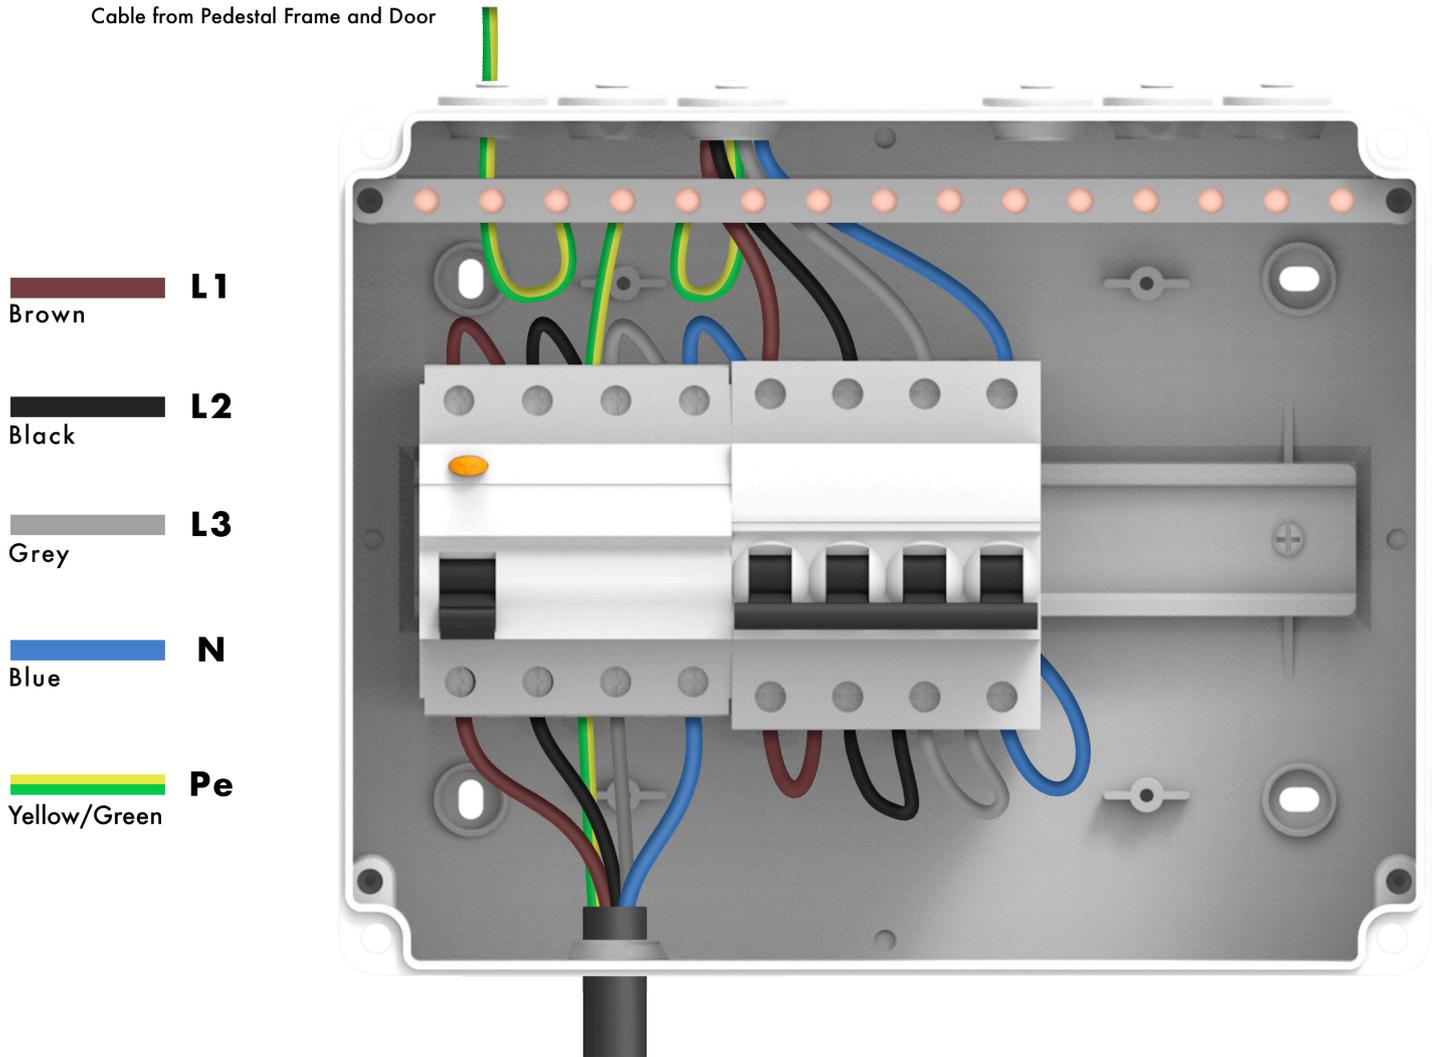


## Electric box configuration 4

### Dual charger triphase

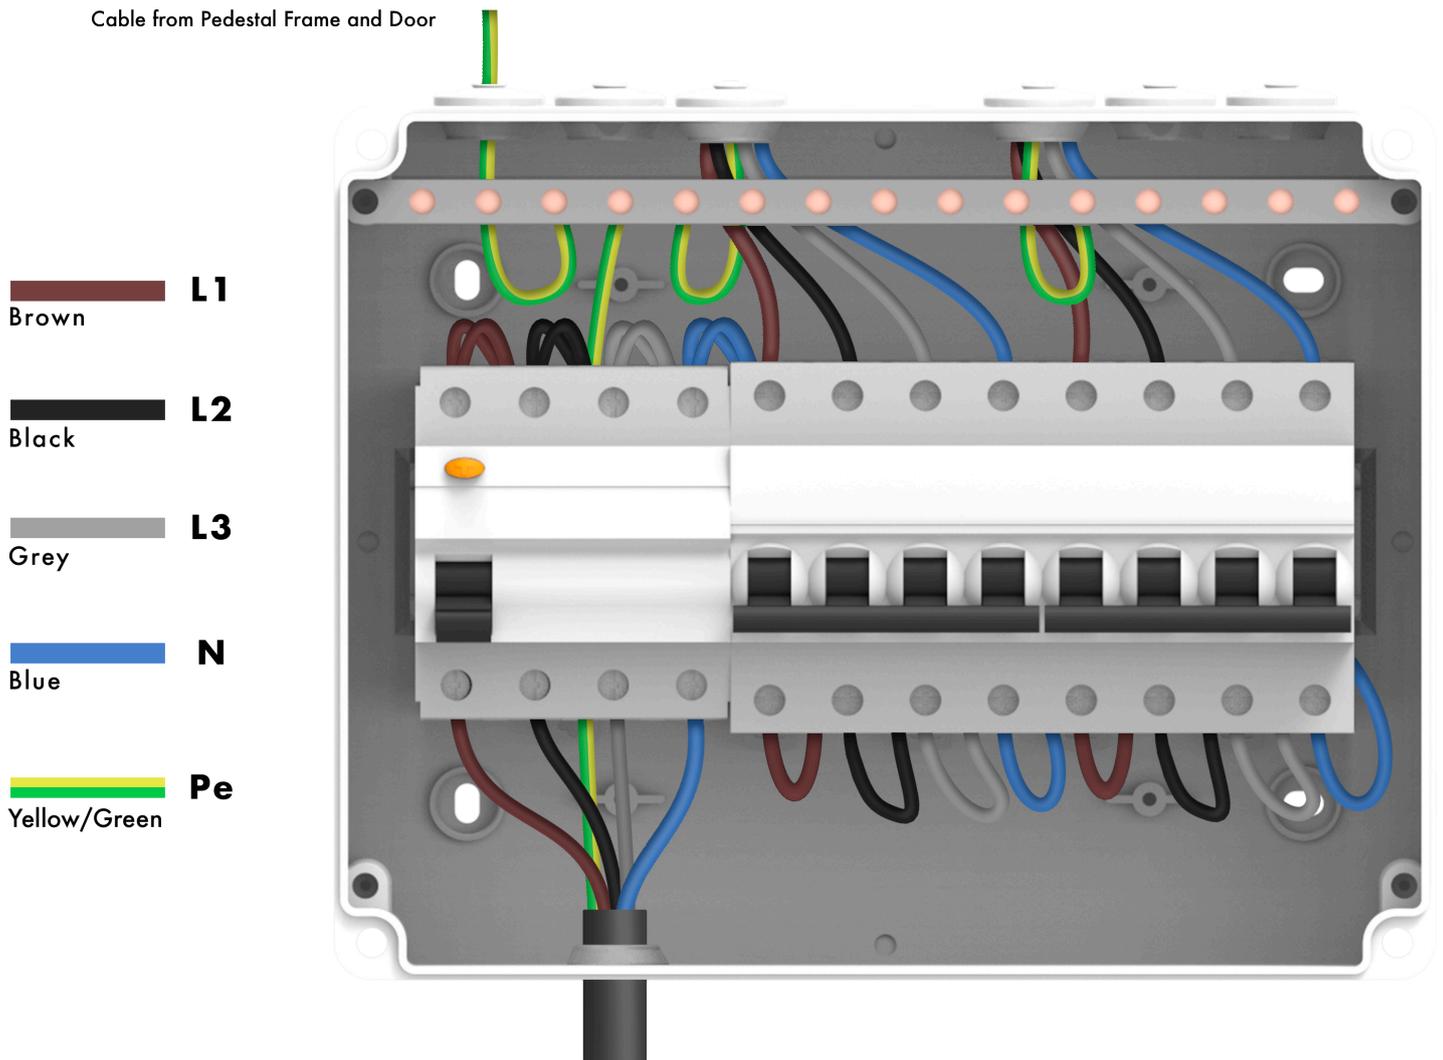



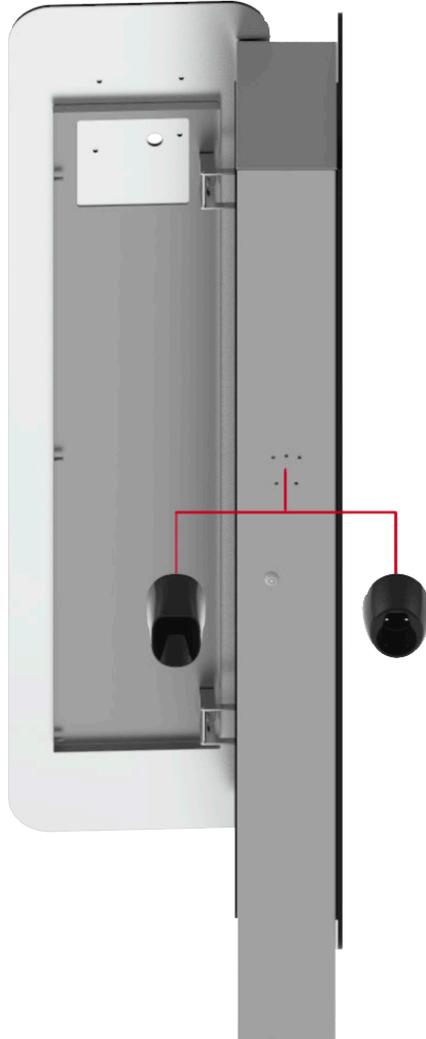





● Items Supplied with Product

Single Configuration




Double Configuration



To connect the cable to the charger you should check the chargers' installation guides.

You can find them in: <https://www.wallbox.com/installation/>

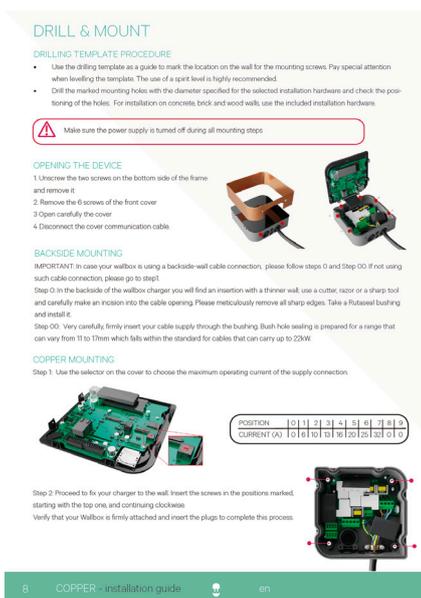

# ONYX PEDESTAL

